

## RESILIENT FLOOR CARE AND MAINTENANCE

Sweeping or vacuuming your resilient floor on a regular basis will serve to remove loose dirt, abrasive sand and grit.

Wash floor on a regular basis using a manufacturer-approved, non-abrasive no-rinse cleaner for best results. Cleaners that contain abrasives or solvents may permanently damage the floor and are not recommended.

High-gloss, urethane floors benefit from the application of a polish. Using a manufacturer-approved polish as part of a regular maintenance program will help protect against surface abrasions that can dull the floor's appearance.

To remedy dulling in high traffic areas (near stove, sink, refrigerator and under chair legs) Deep clean the abraded areas with a manufacturer-recommended floor polish remover. After the floor has been rinsed and allowed to dry, application of two or more thin coats of floor polish will protect the floor and restore the luster.

## AFTER INSTALLATION

Protect and do not disturb the sealed seams on your resilient sheet flooring for at least 16 hours after seam sealer application to ensure a proper seam bond. Permanent damage may result if seam sealer is stepped on or disturbed before it is dry.

Keep traffic to a minimum during the first 48 hours on all resilient sheet and tile floors to allow adhesive to harden.

Furniture should not be placed on floor until the adhesive has had an adequate time to dry (at least 24 hours).

Always move heavy furniture and appliances with care to avoid gouging or tearing the floor. First, lay strips of plywood or hardwood panels on the floor. Then roll, "walk" or slide these items on the strips. Do not push or pull appliances and heavy furniture without taking these precautions.